



## Tool Model: 15 MXT

### Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	2268	3075
1600	2423	3285
1700	2578	3495
1800	2733	3705
1900	2888	3915
2000	3042	4124
2100	3197	4334
2200	3351	4543
2300	3505	4752
2400	3659	4961
2500	3813	5170
2600	3967	5378
2700	4122	5588
2800	4276	5797
2900	4430	6006
3000	4584	6215
3100	4738	6424
3200	4892	6633
3300	5047	6842
3400	5201	7052
3500	5355	7260
3600	5509	7469
3700	5663	7678
3800	5817	7887
3900	5972	8096
4000	6126	8306
4100	6282	8516
4200	6437	8727
4300	6593	8939
4400	6749	9150
4500	6905	9361
4600	7060	9572
4700	7216	9783
4800	7372	9995
4900	7528	10206
5000	7683	10417
5100	7839	10628
5200	7995	10840
5300	8151	11051
5400	8307	11263
5500	8464	11475
5600	8620	11687
5700	8776	11899

PRESSURE IN: PSI	ft-lbs	NM
5800	8932	12110
5900	9088	12322
6000	9244	12533
6100	9401	12745
6200	9557	12957
6300	9713	13169
6400	9869	13380
6500	10026	13593
6600	10182	13805
6700	10339	14017
6800	10495	14229
6900	10652	14441
7000	10808	14653
7100	10961	14861
7200	11114	15068
7300	11267	15275
7400	11419	15482
7500	11572	15689
7600	11725	15897
7700	11878	16104
7800	12031	16312
7900	12184	16519
8000	12337	16727
8100	12493	16937
8200	12648	17148
8300	12804	17360
8400	12960	17571
8500	13116	17783
8600	13272	17994
8700	13428	18206
8800	13584	18417
8900	13740	18629
9000	13896	18840
9100	14046	19044
9200	14196	19247
9300	14347	19451
9400	14497	19655
9500	14647	19858
9600	14797	20062
9700	14948	20266
9800	15098	20470
9900	15249	20674
10000	15399	20878

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.