



Tool Model: 20 MXT

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	2960	4013
1600	3158	4282
1700	3356	4550
1800	3554	4819
1900	3752	5087
2000	3950	5355
2100	4148	5624
2200	4346	5892
2300	4544	6161
2400	4742	6429
2500	4940	6698
2600	5138	6966
2700	5336	7235
2800	5534	7503
2900	5732	7771
3000	5930	8040
3100	6128	8308
3200	6325	8575
3300	6523	8843
3400	6720	9111
3500	6918	9379
3600	7115	9647
3700	7313	9914
3800	7510	10182
3900	7708	10450
4000	7905	10718
4100	8103	10985
4200	8300	11253
4300	8498	11521
4400	8695	11789
4500	8893	12056
4600	9090	12324
4700	9288	12592
4800	9485	12860
4900	9683	13128
5000	9880	13395
5100	10078	13664
5200	10276	13932
5300	10474	14201
5400	10672	14469
5500	10870	14738
5600	11068	15006
5700	11266	15274

PRESSURE IN: PSI	ft-lbs	NM
5800	11464	15543
5900	11662	15811
6000	11860	16080
6100	12057	16347
6200	12254	16614
6300	12451	16881
6400	12648	17148
6500	12845	17415
6600	13042	17682
6700	13239	17949
6800	13436	18217
6900	13633	18484
7000	13830	18751
7100	14028	19019
7200	14226	19288
7300	14424	19556
7400	14622	19825
7500	14820	20093
7600	15018	20361
7700	15216	20630
7800	15414	20898
7900	15612	21167
8000	15810	21435
8100	16008	21703
8200	16205	21971
8300	16403	22239
8400	16600	22506
8500	16798	22774
8600	16995	23042
8700	17193	23310
8800	17390	23577
8900	17588	23845
9000	17785	24113
9100	17983	24381
9200	18180	24648
9300	18378	24916
9400	18575	25184
9500	18773	25452
9600	18970	25720
9700	19168	25987
9800	19365	26255
9900	19563	26523
10000	19760	26791

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.