



Tool Model: 20 XLT

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	2960	4013
1600	3158	4282
1700	3357	4551
1800	3555	4820
1900	3753	5088
2000	3950	5355
2100	4148	5623
2200	4345	5891
2300	4543	6159
2400	4740	6426
2500	4938	6694
2600	5135	6962
2700	5333	7230
2800	5530	7498
2900	5730	7769
3000	5930	8040
3100	6128	8308
3200	6325	8575
3300	6523	8843
3400	6720	9111
3500	6918	9379
3600	7115	9647
3700	7313	9914
3800	7510	10182
3900	7708	10450
4000	7905	10718
4100	8103	10985
4200	8300	11253
4300	8498	11521
4400	8695	11789
4500	8893	12056
4600	9090	12324
4700	9288	12592
4800	9485	12860
4900	9683	13128
5000	9880	13395
5100	10078	13663
5200	10275	13931
5300	10473	14199
5400	10670	14466
5500	10868	14734
5600	11065	15002
5700	11263	15270

PRESSURE IN: PSI	ft-lbs	NM
5800	11460	15537
5900	11660	15809
6000	11860	16080
6100	12055	16344
6200	12250	16609
6300	12448	16876
6400	12645	17144
6500	12843	17412
6600	13040	17680
6700	13238	17947
6800	13435	18215
6900	13633	18483
7000	13830	18751
7100	14028	19018
7200	14225	19286
7300	14423	19554
7400	14620	19822
7500	14820	20093
7600	15020	20364
7700	15218	20632
7800	15415	20900
7900	15613	21167
8000	15810	21435
8100	16005	21700
8200	16200	21964
8300	16400	22235
8400	16600	22506
8500	16798	22774
8600	16995	23042
8700	17193	23310
8800	17390	23577
8900	17588	23845
9000	17785	24113
9100	17983	24381
9200	18180	24648
9300	18378	24916
9400	18575	25184
9500	18773	25452
9600	18970	25720
9700	19168	25987
9800	19365	26255
9900	19563	26523
10000	19760	26791

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.