



## Tool Model: 25 SL

### Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	3845	5213
1600	4100	5559
1700	4358	5908
1800	4615	6257
1900	4873	6606
2000	5130	6955
2100	5385	7301
2200	5640	7647
2300	5898	7996
2400	6155	8345
2500	6410	8691
2600	6665	9036
2700	6923	9386
2800	7180	9735
2900	7435	10080
3000	7690	10426
3100	7948	10775
3200	8205	11124
3300	8463	11473
3400	8720	11823
3500	8975	12168
3600	9230	12514
3700	9488	12863
3800	9745	13212
3900	9998	13555
4000	10250	13897
4100	10510	14249
4200	10770	14602
4300	11025	14948
4400	11280	15293
4500	11538	15643
4600	11795	15992
4700	12048	16334
4800	12300	16676
4900	12560	17029
5000	12820	17381
5100	13075	17727
5200	13330	18073
5300	13588	18422
5400	13845	18771
5500	14103	19120
5600	14360	19469
5700	14615	19815

PRESSURE IN: PSI	ft-lbs	NM
5800	14870	20161
5900	15128	20510
6000	15385	20859
6100	15643	21208
6200	15900	21557
6300	16155	21903
6400	16410	22249
6500	16665	22594
6600	16920	22940
6700	17178	23289
6800	17435	23638
6900	16193	21954
7000	14950	20269
7100	16705	22649
7200	18460	25028
7300	18718	25377
7400	18975	25726
7500	19230	26072
7600	19485	26418
7700	19738	26760
7800	19990	27102
7900	20250	27455
8000	20510	27807
8100	20768	28157
8200	21025	28506
8300	21283	28855
8400	21540	29204
8500	21795	29550
8600	22050	29895
8700	22308	30245
8800	22565	30594
8900	22820	30939
9000	23075	31285
9100	23333	31634
9200	23590	31983
9300	23845	32329
9400	24100	32675
9500	24358	33024
9600	24615	33373
9700	24873	33722
9800	25130	34071
9900	25385	34417
10000	25640	34763

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.