



## Tool Model: 25 XL

### Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	3813	5170
1600	4065	5511
1700	4320	5857
1800	4575	6203
1900	4828	6545
2000	5080	6887
2100	5335	7233
2200	5590	7579
2300	5845	7925
2400	6100	8270
2500	6353	8613
2600	6605	8955
2700	6860	9301
2800	7115	9647
2900	7368	9989
3000	7620	10331
3100	7875	10677
3200	8130	11023
3300	8385	11368
3400	8640	11714
3500	8893	12056
3600	9145	12399
3700	9400	12745
3800	9655	13090
3900	9908	13433
4000	10160	13775
4100	10415	14121
4200	10670	14466
4300	10925	14812
4400	11180	15158
4500	11433	15500
4600	11685	15843
4700	11940	16188
4800	12195	16534
4900	12448	16876
5000	12700	17219
5100	12955	17564
5200	13210	17910
5300	13465	18256
5400	13720	18602
5500	13973	18944
5600	14225	19286
5700	14480	19632

PRESSURE IN: PSI	ft-lbs	NM
5800	14735	19978
5900	14988	20320
6000	15240	20662
6100	15495	21008
6200	15750	21354
6300	16005	21700
6400	16260	22045
6500	16513	22388
6600	16765	22730
6700	17020	23076
6800	17275	23421
6900	17528	23764
7000	17780	24106
7100	18035	24452
7200	18290	24798
7300	18545	25143
7400	18800	25489
7500	19053	25831
7600	19305	26174
7700	19560	26519
7800	19815	26865
7900	20068	27208
8000	20320	27550
8100	20575	27896
8200	20830	28241
8300	21085	28587
8400	21340	28933
8500	26593	36054
8600	31845	43175
8700	27100	36742
8800	22355	30309
8900	22608	30651
9000	22860	30994
9100	23115	31339
9200	23370	31685
9300	23625	32031
9400	23880	32377
9500	24133	32719
9600	24385	33061
9700	24640	33407
9800	24895	33753
9900	25148	34095
10000	25400	34437

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.