



## Tool Model: 35 MXT

### Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	5400	7321
1600	5772	7826
1700	6144	8330
1800	6516	8834
1900	6888	9339
2000	7260	9843
2100	7641	10359
2200	8021	10875
2300	8402	11391
2400	8782	11907
2500	9163	12423
2600	9543	12938
2700	9924	13454
2800	10304	13970
2900	10685	14486
3000	11065	15002
3100	11441	15512
3200	11817	16021
3300	12193	16531
3400	12569	17041
3500	12945	17551
3600	13321	18061
3700	13697	18570
3800	14073	19080
3900	14449	19590
4000	14825	20100
4100	15199	20606
4200	15572	21113
4300	15946	21619
4400	16319	22125
4500	16693	22632
4600	17066	23138
4700	17440	23644
4800	17813	24151
4900	18187	24657
5000	18560	25164
5100	18933	25669
5200	19306	26175
5300	19679	26681
5400	20052	27187
5500	20425	27692
5600	20798	28198
5700	21171	28704

PRESSURE IN: PSI	ft-lbs	NM
5800	21544	29209
5900	21917	29715
6000	22290	30221
6100	22659	30720
6200	23027	31220
6300	23396	31720
6400	23764	32219
6500	24133	32719
6600	24501	33218
6700	24870	33718
6800	25238	34218
6900	25607	34717
7000	25975	35217
7100	26346	35719
7200	26716	36222
7300	27087	36724
7400	27457	37226
7500	27828	37729
7600	28198	38231
7700	28569	38733
7800	28939	39235
7900	29310	39738
8000	29680	40240
8100	30051	40743
8200	30422	41246
8300	30793	41749
8400	31164	42252
8500	31535	42755
8600	31906	43258
8700	32277	43761
8800	32648	44264
8900	33019	44767
9000	33390	45270
9100	33761	45773
9200	34132	46276
9300	34503	46779
9400	34874	47282
9500	35245	47785
9600	35616	48288
9700	35987	48791
9800	36358	49294
9900	36729	49797
10000	37100	50300

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.