



Tool Model: 5 SL

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	762	1033
1600	810	1098
1700	863	1169
1800	915	1241
1900	963	1305
2000	1010	1369
2100	1063	1441
2200	1115	1512
2300	1168	1583
2400	1220	1654
2500	1268	1718
2600	1315	1783
2700	1368	1854
2800	1420	1925
2900	1473	1996
3000	1525	2068
3100	1573	2132
3200	1620	2196
3300	1673	2268
3400	1725	2339
3500	1778	2410
3600	1830	2481
3700	1878	2546
3800	1925	2610
3900	1978	2681
4000	2030	2752
4100	2080	2820
4200	2130	2888
4300	2183	2959
4400	2235	3030
4500	2285	3098
4600	2335	3166
4700	2388	3237
4800	2440	3308
4900	2488	3373
5000	2535	3437
5100	2588	3508
5200	2640	3579
5300	2688	3644
5400	2735	3708
5500	2788	3779
5600	2840	3850
5700	2893	3922

PRESSURE IN: PSI	ft-lbs	NM
5800	2945	3993
5900	2995	4061
6000	3045	4128
6100	3093	4193
6200	3140	4257
6300	3195	4332
6400	3250	4406
6500	3300	4474
6600	3350	4542
6700	3398	4606
6800	3445	4671
6900	3500	4745
7000	3555	4820
7100	3605	4888
7200	3655	4955
7300	3703	5020
7400	3750	5084
7500	3805	5159
7600	3860	5233
7700	3908	5298
7800	3955	5362
7900	4008	5433
8000	4060	5505
8100	4110	5572
8200	4160	5640
8300	4213	5711
8400	4265	5782
8500	4315	5850
8600	4365	5918
8700	4418	5989
8800	4470	6060
8900	4518	6125
9000	4565	6189
9100	4618	6260
9200	4670	6332
9300	4720	6399
9400	4770	6467
9500	4823	6538
9600	4875	6610
9700	4923	6674
9800	4970	6738
9900	5023	6810
10000	5075	6881

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.