



Tool Model: 5 XL

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	815	1105
1600	870	1180
1700	923	1251
1800	975	1322
1900	1030	1396
2000	1085	1471
2100	1138	1542
2200	1190	1613
2300	1245	1688
2400	1300	1763
2500	1355	1837
2600	1410	1912
2700	1463	1983
2800	1515	2054
2900	1570	2129
3000	1625	2203
3100	1680	2278
3200	1735	2352
3300	1788	2423
3400	1840	2495
3500	1895	2569
3600	1950	2644
3700	2003	2715
3800	2055	2786
3900	2110	2861
4000	2165	2935
4100	2220	3010
4200	2275	3084
4300	2328	3156
4400	2380	3227
4500	2435	3301
4600	2490	3376
4700	2545	3451
4800	2600	3525
4900	2653	3596
5000	2705	3667
5100	2760	3742
5200	2815	3817
5300	2870	3891
5400	2925	3966
5500	2978	4037
5600	3030	4108
5700	3085	4183

PRESSURE IN: PSI	ft-lbs	NM
5800	3140	4257
5900	3195	4332
6000	3250	4406
6100	3303	4478
6200	3355	4549
6300	3410	4623
6400	3465	4698
6500	3518	4769
6600	3570	4840
6700	3625	4915
6800	3680	4989
6900	3735	5064
7000	3790	5138
7100	3843	5210
7200	3895	5281
7300	3950	5355
7400	4005	5430
7500	4060	5505
7600	4115	5579
7700	4168	5650
7800	4220	5721
7900	4275	5796
8000	4330	5871
8100	4385	5945
8200	4440	6020
8300	4493	6091
8400	4545	6162
8500	4600	6237
8600	4655	6311
8700	4708	6382
8800	4760	6454
8900	4815	6528
9000	4870	6603
9100	4925	6677
9200	4980	6752
9300	5033	6823
9400	5085	6894
9500	5140	6969
9600	5195	7043
9700	5250	7118
9800	5305	7193
9900	5358	7264
10000	5410	7335

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.