



Tool Model: Edge 12

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	1615	2190
1600	1726	2340
1700	1837	2491
1800	1948	2641
1900	2060	2792
2000	2171	2943
2100	2281	3092
2200	2390	3240
2300	2500	3390
2400	2610	3539
2500	2720	3687
2600	2829	3836
2700	2939	3985
2800	3049	4134
2900	3159	4283
3000	3269	4432
3100	3382	4585
3200	3494	4737
3300	3607	4890
3400	3719	5042
3500	3832	5195
3600	3944	5347
3700	4057	5500
3800	4169	5652
3900	4282	5806
4000	4395	5959
4100	4508	6112
4200	4621	6265
4300	4734	6418
4400	4847	6572
4500	4961	6725
4600	5074	6879
4700	5187	7033
4800	5300	7186
4900	5413	7339
5000	5526	7492
5100	5643	7650
5200	5759	7808
5300	5875	7965
5400	5991	8123
5500	6107	8280
5600	6223	8437
5700	6340	8595

PRESSURE IN: PSI	ft-lbs	NM
5800	6456	8753
5900	6572	8910
6000	6688	9068
6100	6803	9223
6200	6917	9378
6300	7031	9533
6400	7145	9687
6500	7260	9842
6600	7374	9998
6700	7489	10153
6800	7603	10308
6900	7717	10463
7000	7831	10617
7100	7944	10770
7200	8056	10922
7300	8168	11074
7400	8280	11226
7500	8393	11379
7600	8505	11531
7700	8617	11683
7800	8729	11835
7900	8842	11987
8000	8954	12140
8100	9078	12307
8200	9201	12475
8300	9324	12641
8400	9447	12808
8500	9571	12976
8600	9694	13143
8700	9817	13310
8800	9940	13477
8900	10064	13644
9000	10187	13812
9100	10298	13961
9200	10408	14111
9300	10519	14261
9400	10629	14411
9500	10739	14560
9600	10849	14709
9700	10960	14859
9800	11070	15009
9900	11181	15159
10000	11291	15308

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.