



## Tool Model: Edge 4

### Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	443	601
1600	474	643
1700	505	684
1800	535	725
1900	566	767
2000	596	808
2100	627	850
2200	658	892
2300	689	934
2400	720	976
2500	751	1018
2600	782	1060
2700	813	1102
2800	844	1144
2900	875	1186
3000	906	1228
3100	938	1271
3200	969	1314
3300	1001	1356
3400	1032	1399
3500	1063	1441
3600	1094	1483
3700	1126	1526
3800	1157	1569
3900	1189	1611
4000	1220	1654
4100	1252	1697
4200	1283	1739
4300	1315	1783
4400	1347	1826
4500	1379	1869
4600	1410	1912
4700	1442	1955
4800	1474	1998
4900	1506	2041
5000	1537	2084
5100	1568	2126
5200	1599	2168
5300	1631	2211
5400	1662	2253
5500	1693	2295
5600	1724	2337
5700	1756	2380

PRESSURE IN: PSI	ft-lbs	NM
5800	1787	2423
5900	1818	2465
6000	1849	2507
6100	1880	2549
6200	1911	2591
6300	1943	2634
6400	1974	2676
6500	2005	2718
6600	2036	2760
6700	2068	2803
6800	2099	2846
6900	2130	2888
7000	2161	2930
7100	2192	2972
7200	2223	3014
7300	2254	3056
7400	2285	3098
7500	2316	3139
7600	2346	3181
7700	2377	3223
7800	2408	3265
7900	2439	3307
8000	2470	3349
8100	2501	3390
8200	2531	3432
8300	2562	3474
8400	2593	3516
8500	2624	3557
8600	2654	3598
8700	2685	3640
8800	2716	3682
8900	2747	3724
9000	2777	3765
9100	2807	3806
9200	2837	3846
9300	2868	3888
9400	2898	3929
9500	2928	3970
9600	2958	4010
9700	2989	4052
9800	3019	4093
9900	3049	4134
10000	3079	4175

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.