



Tool Model: Edge 6
Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	893	1211
1600	955	1295
1700	1017	1379
1800	1079	1463
1900	1141	1547
2000	1203	1631
2100	1266	1716
2200	1328	1801
2300	1391	1885
2400	1453	1970
2500	1516	2055
2600	1579	2141
2700	1642	2226
2800	1704	2310
2900	1767	2396
3000	1830	2481
3100	1893	2567
3200	1956	2652
3300	2020	2738
3400	2083	2824
3500	2146	2910
3600	2209	2995
3700	2272	3080
3800	2335	3166
3900	2526	3424
4000	2716	3682
4100	2653	3596
4200	2589	3510
4300	2653	3596
4400	2716	3682
4500	2780	3768
4600	2843	3855
4700	2907	3941
4800	2970	4027
4900	3034	4113
5000	3097	4199
5100	3160	4284
5200	3223	4370
5300	3287	4456
5400	3350	4542
5500	3413	4627
5600	3476	4713
5700	3540	4799

PRESSURE IN: PSI	ft-lbs	NM
5800	3603	4885
5900	3667	4971
6000	3730	5057
6100	3795	5145
6200	3859	5232
6300	3924	5319
6400	3988	5407
6500	4053	5494
6600	4117	5582
6700	4182	5669
6800	4246	5757
6900	4311	5844
7000	4375	5932
7100	4375	5932
7200	4375	5932
7300	4502	6104
7400	4629	6276
7500	4693	6362
7600	4756	6448
7700	4820	6534
7800	4883	6620
7900	4946	6706
8000	5009	6791
8100	5073	6877
8200	5136	6963
8300	5200	7050
8400	5264	7137
8500	5328	7223
8600	5391	7309
8700	5455	7395
8800	5518	7481
8900	5582	7567
9000	5645	7653
9100	5705	7734
9200	5764	7815
9300	5824	7896
9400	5883	7976
9500	5943	8058
9600	6003	8139
9700	6063	8220
9800	6122	8300
9900	6182	8381
10000	6241	8462

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.