



Tool Model: Edge 8

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	1230	1668
1600	1314	1782
1700	1398	1895
1800	1482	2009
1900	1566	2123
2000	1650	2237
2100	1736	2353
2200	1821	2469
2300	1907	2585
2400	1992	2701
2500	2078	2817
2600	2163	2933
2700	2249	3049
2800	2334	3164
2900	2420	3280
3000	2505	3396
3100	2590	3512
3200	2675	3627
3300	2760	3742
3400	2845	3857
3500	2930	3972
3600	3015	4088
3700	3100	4203
3800	3185	4318
3900	3270	4433
4000	3355	4549
4100	3441	4665
4200	3526	4781
4300	3612	4896
4400	3697	5012
4500	3783	5128
4600	3868	5244
4700	3954	5360
4800	4039	5476
4900	4125	5592
5000	4210	5708
5100	4297	5825
5200	4383	5942
5300	4470	6060
5400	4556	6177
5500	4643	6294
5600	4729	6412
5700	4816	6529

PRESSURE IN: PSI	ft-lbs	NM
5800	4902	6646
5900	4989	6763
6000	5075	6881
6100	5162	6999
6200	5249	7117
6300	5336	7235
6400	5423	7353
6500	5510	7470
6600	5597	7588
6700	5684	7706
6800	5771	7824
6900	5858	7942
7000	5945	8060
7100	6031	8177
7200	6117	8293
7300	6203	8410
7400	6289	8527
7500	6375	8643
7600	6461	8760
7700	6547	8876
7800	6633	8993
7900	6719	9110
8000	6805	9226
8100	6892	9344
8200	6979	9462
8300	7066	9580
8400	7153	9698
8500	7240	9816
8600	7327	9934
8700	7414	10052
8800	7501	10170
8900	7588	10288
9000	7675	10406
9100	7763	10525
9200	7851	10644
9300	7939	10764
9400	8027	10883
9500	8115	11002
9600	8203	11122
9700	8291	11241
9800	8379	11360
9900	8467	11480
10000	8555	11599

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.