



Tool Model: LC 1 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	115	156
1600	123	167
1700	131	177
1800	138	187
1900	146	197
2000	153	207
2100	161	218
2200	168	228
2300	176	239
2400	184	249
2500	192	260
2600	199	270
2700	207	281
2800	215	291
2900	223	302
3000	230	312
3100	238	323
3200	246	334
3300	254	344
3400	262	355
3500	270	365
3600	277	376
3700	285	386
3800	293	397
3900	301	408
4000	309	419
4100	317	430
4200	325	441
4300	333	451
4400	341	462
4500	349	473
4600	357	484
4700	365	495
4800	373	506
4900	381	517
5000	389	527
5100	397	538
5200	405	549
5300	413	560
5400	421	571
5500	429	582
5600	437	592
5700	445	603

PRESSURE IN: PSI	ft-lbs	NM
5800	453	614
5900	461	625
6000	469	636
6100	477	647
6200	485	658
6300	493	668
6400	501	679
6500	510	691
6600	518	702
6700	526	713
6800	534	724
6900	542	735
7000	550	746
7100	558	757
7200	566	767
7300	574	778
7400	582	789
7500	590	799
7600	597	809
7700	605	820
7800	613	831
7900	621	842
8000	629	853
8100	637	864
8200	645	874
8300	653	885
8400	661	896
8500	670	908
8600	678	919
8700	686	930
8800	694	941
8900	702	952
9000	710	963
9100	718	973
9200	726	984
9300	734	995
9400	742	1006
9500	750	1016
9600	757	1026
9700	765	1037
9800	773	1048
9900	781	1059
10000	789	1070

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.