



Tool Model: LC 20 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	3067	4158
1600	3272	4436
1700	3477	4713
1800	3681	4991
1900	3886	5268
2000	4090	5545
2100	4295	5822
2200	4499	6100
2300	4704	6377
2400	4908	6654
2500	5113	6932
2600	5317	7209
2700	5522	7486
2800	5726	7763
2900	5931	8041
3000	6135	8318
3100	6340	8595
3200	6544	8872
3300	6749	9150
3400	6953	9427
3500	7158	9704
3600	7362	9981
3700	7567	10259
3800	7771	10536
3900	7976	10813
4000	8180	11090
4100	8385	11368
4200	8589	11645
4300	8794	11922
4400	8998	12199
4500	9203	12477
4600	9407	12754
4700	9612	13031
4800	9816	13309
4900	10021	13586
5000	10225	13863
5100	10430	14140
5200	10634	14418
5300	10839	14695
5400	11043	14972
5500	11248	15249
5600	11452	15527
5700	11657	15804

PRESSURE IN: PSI	ft-lbs	NM
5800	11861	16081
5900	12066	16358
6000	12270	16636
6100	12475	16913
6200	12679	17190
6300	12884	17467
6400	13088	17745
6500	13293	18022
6600	13497	18299
6700	13702	18576
6800	13906	18854
6900	14111	19131
7000	14315	19408
7100	14520	19686
7200	14724	19963
7300	14929	20240
7400	15133	20517
7500	15338	20795
7600	15542	21072
7700	15747	21349
7800	15951	21626
7900	16156	21904
8000	16360	22181
8100	16565	22458
8200	16769	22735
8300	16974	23013
8400	17178	23290
8500	17383	23567
8600	17587	23844
8700	17792	24122
8800	17996	24399
8900	18201	24676
9000	18405	24953
9100	18610	25231
9200	18814	25508
9300	19019	25785
9400	19223	26063
9500	19428	26340
9600	19632	26617
9700	19837	26894
9800	20041	27172
9900	20246	27449
10000	20450	27726

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.