



Tool Model: LC 4 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	617	837
1600	658	892
1700	699	947
1800	739	1002
1900	780	1057
2000	820	1112
2100	863	1169
2200	905	1227
2300	947	1284
2400	989	1341
2500	1032	1399
2600	1074	1456
2700	1116	1513
2800	1158	1570
2900	1201	1628
3000	1243	1685
3100	1286	1744
3200	1329	1802
3300	1372	1859
3400	1414	1917
3500	1457	1975
3600	1500	2034
3700	1543	2091
3800	1585	2149
3900	1628	2207
4000	1671	2266
4100	1715	2325
4200	1758	2383
4300	1802	2442
4400	1845	2501
4500	1889	2561
4600	1933	2621
4700	1977	2680
4800	2020	2739
4900	2064	2798
5000	2107	2857
5100	2150	2915
5200	2193	2973
5300	2236	3032
5400	2279	3090
5500	2323	3149
5600	2366	3208
5700	2409	3266

PRESSURE IN: PSI	ft-lbs	NM
5800	2452	3324
5900	2495	3383
6000	2538	3441
6100	2582	3500
6200	2625	3559
6300	2669	3618
6400	2712	3677
6500	2756	3736
6600	2799	3795
6700	2843	3854
6800	2886	3913
6900	2930	3972
7000	2973	4031
7100	3017	4090
7200	3061	4150
7300	3105	4210
7400	3149	4269
7500	3193	4328
7600	3236	4387
7700	3280	4447
7800	3324	4507
7900	3368	4566
8000	3412	4626
8100	3456	4686
8200	3500	4745
8300	3544	4805
8400	3588	4865
8500	3632	4924
8600	3675	4983
8700	3719	5042
8800	3763	5102
8900	3807	5162
9000	3851	5221
9100	3895	5281
9200	3939	5340
9300	3983	5400
9400	4027	5460
9500	4072	5520
9600	4116	5580
9700	4160	5640
9800	4204	5700
9900	4248	5759
10000	4292	5819

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.