



Tool Model: SQV .6

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	106	144
1600	113	153
1700	121	163
1800	128	174
1900	135	183
2000	142	193
2100	149	202
2200	156	212
2300	163	221
2400	170	230
2500	178	241
2600	185	251
2700	192	260
2800	199	270
2900	206	279
3000	213	289
3100	220	298
3200	227	308
3300	234	317
3400	241	327
3500	249	337
3600	256	347
3700	263	357
3800	270	366
3900	277	376
4000	284	385
4100	291	395
4200	298	404
4300	305	414
4400	312	423
4500	320	433
4600	327	443
4700	334	453
4800	341	462
4900	348	472
5000	355	481
5100	362	491
5200	369	500
5300	376	510
5400	383	519
5500	391	529
5600	398	540
5700	405	549

PRESSURE IN: PSI	ft-lbs	NM
5800	412	559
5900	419	568
6000	426	578
6100	433	587
6200	440	597
6300	447	606
6400	454	616
6500	462	626
6600	469	636
6700	476	645
6800	483	655
6900	490	664
7000	497	674
7100	504	683
7200	511	693
7300	518	702
7400	525	712
7500	533	722
7600	540	732
7700	547	742
7800	554	751
7900	561	761
8000	568	770
8100	575	780
8200	582	789
8300	589	799
8400	596	808
8500	604	818
8600	611	828
8700	618	838
8800	625	847
8900	632	857
9000	639	866
9100	646	876
9200	653	885
9300	660	895
9400	667	904
9500	675	914
9600	682	925
9700	689	934
9800	696	944
9900	703	953
10000	710	963

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.