



Tool Model: SQV 2

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	175	237
1600	186	252
1700	197	267
1800	208	282
1900	219	297
2000	230	312
2100	242	327
2200	253	343
2300	265	359
2400	276	374
2500	288	390
2600	299	405
2700	311	421
2800	322	437
2900	334	452
3000	345	468
3100	357	483
3200	368	499
3300	380	515
3400	391	530
3500	403	546
3600	414	561
3700	426	577
3800	437	592
3900	449	608
4000	460	624
4100	472	639
4200	483	655
4300	495	670
4400	506	686
4500	518	702
4600	529	717
4700	541	733
4800	552	748
4900	564	764
5000	575	780
5100	587	795
5200	598	811
5300	610	826
5400	621	842
5500	633	858
5600	644	873
5700	656	889

PRESSURE IN: PSI	ft-lbs	NM
5800	667	904
5900	679	920
6000	690	936
6100	702	951
6200	713	967
6300	725	982
6400	736	998
6500	748	1013
6600	759	1029
6700	771	1045
6800	782	1060
6900	794	1076
7000	805	1091
7100	817	1107
7200	828	1123
7300	840	1138
7400	851	1154
7500	863	1169
7600	874	1185
7700	886	1201
7800	897	1216
7900	909	1232
8000	920	1247
8100	932	1263
8200	943	1279
8300	955	1294
8400	966	1310
8500	978	1325
8600	989	1341
8700	1001	1356
8800	1012	1372
8900	1024	1388
9000	1035	1403
9100	1047	1419
9200	1058	1434
9300	1070	1450
9400	1081	1466
9500	1093	1481
9600	1104	1497
9700	1116	1512
9800	1127	1528
9900	1139	1544
10000	1150	1559

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.