



Tool Model: Stealth-14 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	2105	2854
1600	2247	3046
1700	2390	3240
1800	2532	3433
1900	2675	3626
2000	2817	3819
2100	2960	4012
2200	3102	4206
2300	3244	4398
2400	3386	4591
2500	3529	4784
2600	3671	4977
2700	3813	5170
2800	3955	5362
2900	4098	5555
3000	4240	5749
3100	4383	5942
3200	4525	6135
3300	4668	6328
3400	4810	6521
3500	4952	6714
3600	5094	6906
3700	5237	7100
3800	5379	7293
3900	5522	7486
4000	5664	7679
4100	5806	7872
4200	5948	8064
4300	6090	8257
4400	6232	8449
4500	6375	8643
4600	6517	8836
4700	6659	9028
4800	6801	9221
4900	6943	9413
5000	7085	9606
5100	7229	9800
5200	7372	9995
5300	7516	10190
5400	7659	10384
5500	7802	10578
5600	7945	10772
5700	8089	10966

PRESSURE IN: PSI	ft-lbs	NM
5800	8232	11161
5900	8376	11356
6000	8519	11550
6100	8662	11744
6200	8805	11938
6300	8948	12132
6400	9091	12326
6500	9234	12519
6600	9377	12713
6700	9520	12907
6800	9663	13101
6900	9806	13295
7000	9949	13489
7100	10093	13684
7200	10237	13879
7300	10381	14075
7400	10525	14270
7500	10670	14466
7600	10814	14662
7700	10958	14857
7800	11102	15052
7900	11246	15247
8000	11390	15443
8100	11533	15636
8200	11676	15830
8300	11819	16024
8400	11962	16218
8500	12105	16412
8600	12248	16606
8700	12391	16800
8800	12534	16994
8900	12677	17187
9000	12820	17381
9100	12964	17576
9200	13107	17770
9300	13251	17965
9400	13394	18160
9500	13688	18558
9600	13981	18955
9700	13975	18947
9800	13968	18938
9900	14112	19132
10000	14255	19327

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.