



Tool Model: Stealth-2 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	278	377
1600	297	403
1700	317	429
1800	336	456
1900	356	482
2000	375	508
2100	394	534
2200	413	560
2300	432	585
2400	450	610
2500	469	636
2600	488	662
2700	507	687
2800	525	712
2900	544	738
3000	563	763
3100	582	788
3200	600	813
3300	619	839
3400	638	865
3500	657	890
3600	675	915
3700	694	941
3800	713	967
3900	732	992
4000	750	1017
4100	769	1042
4200	787	1067
4300	806	1093
4400	825	1119
4500	844	1144
4600	862	1169
4700	881	1194
4800	900	1220
4900	919	1245
5000	937	1270
5100	956	1295
5200	974	1321
5300	993	1346
5400	1011	1371
5500	1030	1396
5600	1048	1421
5700	1067	1446

PRESSURE IN: PSI	ft-lbs	NM
5800	1085	1471
5900	1104	1496
6000	1122	1521
6100	1091	1479
6200	1060	1437
6300	1129	1531
6400	1198	1624
6500	1217	1649
6600	1235	1674
6700	1254	1700
6800	1273	1726
6900	1292	1752
7000	1311	1777
7100	1330	1803
7200	1348	1828
7300	1367	1853
7400	1385	1878
7500	1403	1902
7600	1421	1927
7700	1440	1952
7800	1458	1977
7900	1477	2002
8000	1495	2027
8100	1514	2052
8200	1532	2077
8300	1551	2103
8400	1570	2129
8500	1589	2154
8600	1607	2179
8700	1626	2205
8800	1645	2230
8900	1664	2255
9000	1682	2280
9100	1701	2306
9200	1719	2331
9300	1738	2356
9400	1757	2382
9500	1776	2407
9600	1794	2432
9700	1813	2458
9800	1832	2484
9900	1851	2509
10000	1869	2534

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.