



Tool Model: Stealth-22 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	3250	4406
1600	3472	4707
1700	3694	5008
1800	3916	5309
1900	4138	5610
2000	4360	5911
2100	4581	6211
2200	4802	6511
2300	5023	6810
2400	5244	7110
2500	5465	7409
2600	5686	7709
2700	5907	8009
2800	6128	8308
2900	6349	8608
3000	6570	8908
3100	6785	9199
3200	7000	9491
3300	7215	9782
3400	7430	10074
3500	7645	10365
3600	7860	10657
3700	8075	10948
3800	8290	11240
3900	8505	11531
4000	8720	11823
4100	8926	12102
4200	9132	12381
4300	9338	12660
4400	9544	12940
4500	9750	13219
4600	9956	13498
4700	10162	13778
4800	10368	14057
4900	10574	14336
5000	10780	14616
5100	11013	14931
5200	11245	15246
5300	11478	15561
5400	11710	15876
5500	11943	16192
5600	12175	16507
5700	12859	17434

PRESSURE IN: PSI	ft-lbs	NM
5800	13542	18360
5900	13324	18064
6000	13105	17768
6100	13324	18064
6200	13542	18360
6300	13761	18656
6400	13979	18953
6500	14197	19248
6600	14415	19544
6700	14634	19840
6800	14852	20136
6900	15071	20433
7000	15289	20729
7100	14009	18993
7200	12729	17258
7300	14449	19590
7400	16169	21922
7500	16390	22221
7600	16610	22520
7700	16830	22818
7800	17050	23116
7900	17270	23415
8000	17490	23713
8100	17709	24010
8200	17928	24307
8300	18147	24604
8400	18366	24901
8500	18585	25198
8600	18804	25494
8700	19023	25791
8800	19242	26088
8900	19461	26385
9000	19680	26682
9100	19900	26980
9200	20119	27277
9300	20339	27575
9400	20558	27873
9500	20778	28170
9600	20997	28468
9700	21217	28765
9800	21436	29063
9900	21656	29361
10000	21875	29658

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.