



Tool Model: Stealth-4 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	604	819
1600	644	873
1700	685	928
1800	725	983
1900	766	1038
2000	806	1093
2100	846	1146
2200	885	1200
2300	925	1253
2400	964	1307
2500	1004	1361
2600	1043	1414
2700	1083	1468
2800	1122	1521
2900	1162	1575
3000	1201	1628
3100	1241	1683
3200	1281	1737
3300	1321	1791
3400	1361	1845
3500	1402	1900
3600	1442	1955
3700	1482	2009
3800	1522	2064
3900	1562	2118
4000	1602	2172
4100	1641	2225
4200	1680	2278
4300	1719	2331
4400	1758	2383
4500	1798	2437
4600	1837	2491
4700	1876	2543
4800	1915	2596
4900	1954	2649
5000	1993	2702
5100	2034	2758
5200	2075	2813
5300	2116	2869
5400	2157	2924
5500	2199	2981
5600	2240	3037
5700	2281	3093

PRESSURE IN: PSI	ft-lbs	NM
5800	2322	3148
5900	2363	3204
6000	2404	3259
6100	2445	3314
6200	2485	3369
6300	2526	3424
6400	2566	3479
6500	2607	3534
6600	2647	3589
6700	2688	3644
6800	2728	3699
6900	2769	3754
7000	2809	3808
7100	2848	3861
7200	2887	3914
7300	2926	3967
7400	2965	4020
7500	3004	4072
7600	3042	4124
7700	3081	4177
7800	3120	4230
7900	3159	4283
8000	3198	4336
8100	3239	4391
8200	3280	4447
8300	3321	4503
8400	3362	4558
8500	3403	4614
8600	3444	4669
8700	3485	4725
8800	3526	4781
8900	3567	4836
9000	3608	4892
9100	3649	4947
9200	3690	5003
9300	3732	5059
9400	3773	5115
9500	3814	5171
9600	3855	5227
9700	3897	5283
9800	3938	5339
9900	3979	5395
10000	4020	5450

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.