



Tool Model: ULC 28

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	4320	5857
1600	4610	6250
1700	4898	6640
1800	5185	7030
1900	5458	7399
2000	5730	7769
2100	6033	8179
2200	6335	8589
2300	6623	8979
2400	6910	9369
2500	7200	9762
2600	7490	10155
2700	7778	10545
2800	8065	10935
2900	8353	11324
3000	8640	11714
3100	8928	12104
3200	9215	12494
3300	9503	12883
3400	9790	13273
3500	10080	13666
3600	10370	14060
3700	10658	14449
3800	10945	14839
3900	11233	15229
4000	11520	15619
4100	11808	16009
4200	12095	16398
4300	12383	16788
4400	12670	17178
4500	12960	17571
4600	13250	17964
4700	13538	18354
4800	13825	18744
4900	14113	19134
5000	14400	19524
5100	14688	19913
5200	14975	20303
5300	15263	20693
5400	15550	21083
5500	15840	21476
5600	16130	21869
5700	16418	22259

PRESSURE IN: PSI	ft-lbs	NM
5800	16705	22649
5900	16993	23038
6000	17280	23428
6100	17568	23818
6200	17855	24208
6300	18143	24598
6400	18430	24987
6500	18720	25381
6600	19010	25774
6700	19298	26164
6800	19585	26553
6900	19873	26943
7000	20160	27333
7100	20448	27723
7200	20735	28113
7300	21023	28502
7400	21310	28892
7500	21600	29285
7600	21890	29678
7700	22178	30068
7800	22465	30458
7900	22753	30848
8000	23040	31238
8100	23328	31627
8200	23615	32017
8300	23903	32407
8400	24190	32797
8500	24480	33190
8600	24770	33583
8700	25058	33973
8800	25345	34363
8900	25633	34753
9000	25920	35142
9100	26208	35532
9200	26495	35922
9300	26783	36312
9400	27070	36702
9500	27360	37095
9600	27650	37488
9700	27938	37878
9800	28225	38267
9900	28513	38657
10000	28800	39047

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.