



Tool Model: Versa 2 Hex Link# 1-7

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	261	354
1600	179	243
1700	247	334
1800	314	426
1900	332	449
2000	349	473
2100	367	497
2200	384	521
2300	402	544
2400	419	568
2500	437	592
2600	454	616
2700	472	639
2800	489	663
2900	507	687
3000	524	710
3100	542	734
3200	559	758
3300	577	782
3400	594	805
3500	612	829
3600	629	853
3700	646	876
3800	663	899
3900	681	923
4000	698	946
4100	717	971
4200	735	997
4300	753	1021
4400	771	1045
4500	789	1070
4600	807	1094
4700	826	1119
4800	844	1144
4900	862	1169
5000	880	1193
5100	898	1218
5200	916	1242
5300	934	1266
5400	952	1291
5500	970	1315
5600	988	1340
5700	1006	1364

PRESSURE IN: PSI	ft-lbs	NM
5800	1024	1388
5900	1042	1413
6000	1060	1437
6100	1077	1460
6200	1094	1483
6300	1111	1506
6400	1128	1529
6500	1146	1553
6600	1163	1577
6700	1180	1600
6800	1197	1623
6900	1215	1647
7000	1232	1670
7100	1251	1695
7200	1269	1721
7300	1288	1746
7400	1306	1771
7500	1325	1796
7600	1344	1822
7700	1363	1847
7800	1381	1872
7900	1400	1897
8000	1418	1923
8100	1437	1948
8200	1455	1973
8300	1473	1997
8400	1491	2021
8500	1509	2046
8600	1527	2070
8700	1546	2095
8800	1564	2120
8900	1582	2145
9000	1600	2169
9100	1618	2194
9200	1636	2218
9300	1654	2242
9400	1672	2267
9500	1690	2291
9600	1708	2316
9700	1726	2340
9800	1744	2365
9900	1762	2389
10000	1780	2413

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.