



## Tool Model: Versa 2 Hex Link# 8

### Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	278	377
1600	297	403
1700	317	429
1800	336	456
1900	355	481
2000	374	507
2100	393	533
2200	412	559
2300	431	584
2400	449	609
2500	468	635
2600	487	660
2700	506	685
2800	524	710
2900	543	736
3000	562	762
3100	581	788
3200	600	813
3300	619	839
3400	638	865
3500	658	891
3600	677	918
3700	696	944
3800	715	969
3900	734	995
4000	753	1021
4100	773	1047
4200	792	1074
4300	812	1100
4400	831	1127
4500	851	1153
4600	870	1180
4700	890	1206
4800	909	1232
4900	928	1258
5000	947	1284
5100	967	1310
5200	986	1337
5300	1006	1363
5400	1025	1390
5500	1044	1415
5600	1063	1441
5700	1083	1468

PRESSURE IN: PSI	ft-lbs	NM
5800	1102	1494
5900	1121	1520
6000	1140	1546
6100	1160	1572
6200	1179	1598
6300	1199	1625
6400	1218	1651
6500	1237	1677
6600	1256	1703
6700	1276	1729
6800	1295	1756
6900	1315	1782
7000	1334	1809
7100	1353	1834
7200	1372	1860
7300	1392	1887
7400	1411	1913
7500	1431	1939
7600	1450	1966
7700	1469	1992
7800	1488	2017
7900	1508	2044
8000	1527	2070
8100	1547	2097
8200	1566	2123
8300	1586	2150
8400	1606	2177
8500	1626	2204
8600	1645	2230
8700	1665	2257
8800	1685	2285
8900	1705	2311
9000	1724	2337
9100	1744	2364
9200	1763	2390
9300	1783	2417
9400	1802	2443
9500	1822	2470
9600	1842	2497
9700	1862	2524
9800	1881	2550
9900	1901	2577
10000	1920	2603

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.