



Tool Model: Versa 4 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	654	887
1600	700	949
1700	746	1011
1800	792	1074
1900	838	1136
2000	884	1199
2100	928	1258
2200	972	1318
2300	1016	1377
2400	1060	1437
2500	1104	1497
2600	1148	1556
2700	1192	1616
2800	1236	1676
2900	1280	1735
3000	1324	1795
3100	1370	1857
3200	1415	1918
3300	1461	1980
3400	1506	2042
3500	1552	2104
3600	1597	2165
3700	1643	2227
3800	1688	2289
3900	1734	2350
4000	1779	2412
4100	1824	2472
4200	1868	2533
4300	1913	2594
4400	1958	2655
4500	2003	2715
4600	2047	2775
4700	2092	2836
4800	2137	2897
4900	2182	2958
5000	2226	3018
5100	2273	3081
5200	2319	3144
5300	2366	3207
5400	2412	3270
5500	2459	3333
5600	2505	3396
5700	2551	3459

PRESSURE IN: PSI	ft-lbs	NM
5800	2597	3521
5900	2644	3584
6000	2690	3647
6100	2735	3708
6200	2780	3769
6300	2825	3829
6400	2869	3890
6500	2914	3951
6600	2959	4012
6700	3004	4072
6800	3048	4132
6900	3093	4193
7000	3138	4255
7100	3184	4316
7200	3229	4378
7300	3275	4440
7400	3320	4501
7500	3366	4563
7600	3411	4625
7700	3457	4687
7800	3503	4749
7900	3549	4811
8000	3594	4873
8100	3640	4935
8200	3686	4997
8300	3733	5061
8400	3779	5124
8500	3825	5186
8600	3871	5248
8700	3917	5311
8800	3963	5373
8900	4010	5436
9000	4056	5499
9100	4101	5559
9200	4145	5620
9300	4190	5680
9400	4234	5740
9500	4279	5801
9600	4324	5862
9700	4369	5923
9800	4413	5983
9900	4458	6044
10000	4503	6105

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.