



Tool Model: Versa 8 Slim Hex Link #2-3

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	1295	1756
1600	1388	1882
1700	1481	2007
1800	1573	2133
1900	1666	2258
2000	1758	2383
2100	1846	2502
2200	1933	2621
2300	2021	2740
2400	2109	2859
2500	2197	2978
2600	2284	3097
2700	2372	3216
2800	2460	3335
2900	2548	3454
3000	2635	3573
3100	2726	3696
3200	2817	3819
3300	2908	3943
3400	2999	4066
3500	3090	4189
3600	3181	4313
3700	3272	4436
3800	3363	4560
3900	3454	4683
4000	3545	4806
4100	3634	4926
4200	3722	5046
4300	3811	5166
4400	3899	5286
4500	3988	5407
4600	4077	5528
4700	4166	5648
4800	4254	5768
4900	4343	5888
5000	4431	6008
5100	4519	6127
5200	4607	6246
5300	4695	6365
5400	4783	6485
5500	4871	6604
5600	4959	6723
5700	5047	6843

PRESSURE IN: PSI	ft-lbs	NM
5800	5135	6962
5900	5223	7081
6000	5311	7201
6100	5400	7321
6200	5489	7442
6300	5578	7562
6400	5666	7682
6500	5755	7803
6600	5844	7923
6700	5933	8044
6800	6022	8165
6900	6111	8285
7000	6200	8406
7100	6290	8528
7200	6380	8650
7300	6470	8772
7400	6560	8894
7500	6650	9016
7600	6740	9138
7700	6830	9260
7800	6920	9382
7900	7010	9504
8000	7100	9626
8100	7187	9743
8200	7273	9861
8300	7360	9978
8400	7446	10095
8500	7532	10212
8600	7618	10328
8700	7705	10446
8800	7791	10563
8900	7877	10680
9000	7963	10796
9100	8052	10916
9200	8140	11036
9300	8229	11156
9400	8317	11276
9500	8406	11396
9600	8494	11516
9700	8583	11636
9800	8671	11756
9900	8760	11876
10000	8848	11996

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.