



Tool Model: Versa 8 Slim Hex Link #4-9

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	1457	1975
1600	1564	2120
1700	1672	2266
1800	1779	2412
1900	1887	2558
2000	1994	2703
2100	2091	2834
2200	2187	2965
2300	2284	3097
2400	2381	3228
2500	2478	3359
2600	2574	3490
2700	2671	3621
2800	2767	3751
2900	2864	3882
3000	2960	4013
3100	3069	4161
3200	3178	4309
3300	3287	4456
3400	3395	4603
3500	3504	4751
3600	3613	4899
3700	3722	5046
3800	3830	5193
3900	3939	5340
4000	4048	5488
4100	4142	5615
4200	4235	5742
4300	4329	5869
4400	4422	5995
4500	4516	6123
4600	4610	6250
4700	4704	6377
4800	4797	6504
4900	4891	6631
5000	4984	6757
5100	5084	6893
5200	5184	7028
5300	5284	7163
5400	5383	7298
5500	5483	7433
5600	5582	7568
5700	5682	7703

PRESSURE IN: PSI	ft-lbs	NM
5800	5781	7838
5900	5881	7973
6000	5980	8108
6100	6081	8244
6200	6181	8380
6300	6281	8516
6400	6381	8651
6500	6481	8787
6600	6581	8923
6700	6681	9058
6800	6781	9194
6900	6881	9329
7000	6981	9465
7100	7080	9599
7200	7179	9733
7300	7278	9867
7400	7376	10000
7500	7475	10135
7600	7574	10269
7700	7674	10404
7800	7773	10539
7900	7872	10672
8000	7970	10806
8100	8070	10941
8200	8169	11076
8300	8269	11211
8400	8369	11347
8500	8469	11482
8600	8568	11616
8700	8668	11752
8800	8768	11888
8900	8868	12023
9000	8968	12159
9100	9067	12293
9200	9166	12427
9300	9265	12561
9400	9364	12696
9500	9463	12830
9600	9562	12964
9700	9661	13098
9800	9760	13233
9900	9859	13367
10000	9958	13501

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.