



Tool Model: XLCT 14 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	2010	2725
1600	2144	2907
1700	2278	3089
1800	2412	3270
1900	2546	3452
2000	2680	3634
2100	2814	3815
2200	2948	3997
2300	3082	4179
2400	3216	4360
2500	3350	4542
2600	3484	4724
2700	3618	4905
2800	3752	5087
2900	3886	5269
3000	4020	5450
3100	4154	5632
3200	4288	5814
3300	4422	5995
3400	4556	6177
3500	4690	6359
3600	4824	6540
3700	4958	6722
3800	5092	6904
3900	5226	7085
4000	5360	7267
4100	5494	7449
4200	5628	7630
4300	5762	7812
4400	5896	7994
4500	6030	8175
4600	6164	8357
4700	6298	8539
4800	6432	8721
4900	6566	8902
5000	6700	9084
5100	6834	9266
5200	6968	9447
5300	7102	9629
5400	7236	9811
5500	7370	9992
5600	7504	10174
5700	7638	10356

PRESSURE IN: PSI	ft-lbs	NM
5800	7772	10537
5900	7906	10719
6000	8040	10901
6100	8174	11082
6200	8308	11264
6300	8308	11264
6400	8308	11264
6500	8442	11446
6600	8576	11627
6700	8710	11809
6800	8844	11991
6900	8978	12172
7000	9112	12354
7100	9380	12717
7200	9648	13081
7300	9782	13262
7400	9916	13444
7500	10050	13626
7600	10184	13807
7700	10318	13989
7800	10452	14171
7900	10586	14352
8000	10720	14534
8100	10854	14716
8200	10988	14898
8300	11122	15079
8400	11256	15261
8500	11390	15443
8600	11524	15624
8700	11658	15806
8800	11792	15988
8900	11926	16169
9000	12060	16351
9100	12194	16533
9200	12328	16714
9300	12462	16896
9400	12596	17078
9500	12730	17259
9600	12864	17441
9700	12998	17623
9800	13132	17804
9900	13266	17986
10000	13400	18168

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.