



Tool Model: XLCT 18 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	2790	3783
1600	2988	4051
1700	3186	4320
1800	3384	4588
1900	3582	4856
2000	3780	5125
2100	3976	5391
2200	4172	5656
2300	4368	5922
2400	4564	6188
2500	4760	6454
2600	4956	6719
2700	5152	6985
2800	5348	7251
2900	5544	7517
3000	5740	7782
3100	5933	8044
3200	6126	8306
3300	6319	8567
3400	6512	8829
3500	6705	9091
3600	6898	9352
3700	7091	9614
3800	7284	9876
3900	7477	10137
4000	7670	10399
4100	7864	10662
4200	8058	10925
4300	8252	11188
4400	8446	11451
4500	8640	11714
4600	8834	11977
4700	9028	12240
4800	9222	12503
4900	9416	12766
5000	9610	13029
5100	9800	13287
5200	9990	13544
5300	10180	13802
5400	10370	14060
5500	10560	14317
5600	10750	14575
5700	10940	14832

PRESSURE IN: PSI	ft-lbs	NM
5800	11130	15090
5900	11320	15348
6000	11510	15605
6100	11701	15864
6200	11892	16123
6300	12083	16382
6400	12274	16641
6500	12465	16900
6600	12656	17159
6700	12847	17418
6800	13038	17677
6900	13229	17936
7000	13420	18195
7100	13612	18455
7200	13804	18715
7300	13996	18976
7400	14188	19236
7500	14380	19496
7600	14572	19757
7700	14764	20017
7800	14956	20277
7900	15148	20538
8000	15340	20798
8100	15525	21049
8200	15710	21300
8300	15895	21550
8400	16080	21801
8500	16265	22052
8600	16450	22303
8700	16635	22554
8800	16820	22805
8900	17005	23055
9000	17190	23306
9100	17381	23565
9200	17572	23824
9300	17763	24083
9400	17954	24342
9500	18145	24601
9600	18336	24860
9700	18527	25119
9800	18718	25378
9900	18909	25637
10000	19100	25896

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.