



Tool Model: XLCT 2 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	243	329
1600	259	351
1700	276	374
1800	292	396
1900	309	418
2000	325	441
2100	342	464
2200	359	487
2300	376	509
2400	392	531
2500	409	555
2600	426	578
2700	443	600
2800	459	622
2900	476	645
3000	493	668
3100	510	691
3200	526	713
3300	543	736
3400	559	758
3500	575	780
3600	591	801
3700	608	824
3800	624	846
3900	641	868
4000	657	891
4100	674	914
4200	691	937
4300	709	961
4400	726	984
4500	743	1007
4600	760	1030
4700	778	1054
4800	795	1078
4900	812	1101
5000	829	1124
5100	846	1147
5200	863	1170
5300	880	1193
5400	897	1216
5500	914	1239
5600	931	1262
5700	948	1285

PRESSURE IN: PSI	ft-lbs	NM
5800	965	1308
5900	982	1331
6000	999	1354
6100	1016	1377
6200	1033	1401
6300	1050	1424
6400	1067	1447
6500	1085	1470
6600	1102	1494
6700	1119	1517
6800	1136	1540
6900	1153	1563
7000	1170	1586
7100	1187	1609
7200	1204	1632
7300	1222	1656
7400	1239	1680
7500	1256	1703
7600	1273	1726
7700	1291	1750
7800	1308	1773
7900	1325	1796
8000	1342	1819
8100	1360	1843
8200	1377	1867
8300	1395	1891
8400	1412	1914
8500	1429	1937
8600	1446	1960
8700	1464	1984
8800	1481	2008
8900	1499	2032
9000	1516	2055
9100	1533	2078
9200	1550	2101
9300	1567	2125
9400	1584	2148
9500	1602	2171
9600	1619	2195
9700	1636	2218
9800	1653	2241
9900	1670	2264
10000	1687	2287

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.