



## Tool Model: XLCT 30 w/ Hex Link

### Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	4579	6208
1600	4890	6630
1700	5202	7052
1800	5513	7475
1900	5824	7896
2000	6135	8318
2100	6447	8741
2200	6759	9164
2300	7071	9587
2400	7383	10010
2500	7696	10434
2600	8008	10857
2700	8320	11280
2800	8632	11703
2900	8944	12126
3000	9256	12549
3100	9569	12973
3200	9881	13397
3300	10194	13820
3400	10506	14244
3500	10819	14668
3600	11132	15093
3700	11445	15516
3800	11757	15940
3900	12070	16364
4000	12382	16788
4100	12692	17207
4200	13001	17627
4300	13311	18046
4400	13620	18466
4500	13930	18886
4600	14239	19305
4700	14549	19725
4800	14858	20144
4900	15168	20564
5000	15477	20984
5100	15791	21409
5200	16105	21835
5300	16419	22261
5400	16733	22687
5500	17047	23112
5600	17361	23538
5700	17675	23964

PRESSURE IN: PSI	ft-lbs	NM
5800	17989	24389
5900	18303	24815
6000	18617	25241
6100	18924	25656
6200	19230	26072
6300	19537	26488
6400	19843	26903
6500	20150	27319
6600	20456	27734
6700	20763	28150
6800	21069	28565
6900	21376	28981
7000	21682	29396
7100	21991	29815
7200	22299	30233
7300	22608	30651
7400	22916	31070
7500	23224	31487
7600	23532	31905
7700	23841	32323
7800	24149	32741
7900	24458	33159
8000	24766	33578
8100	25087	34013
8200	25408	34448
8300	25729	34883
8400	26050	35319
8500	26371	35754
8600	26692	36189
8700	27013	36624
8800	27334	37059
8900	27655	37495
9000	27976	37930
9100	28277	38338
9200	28578	38746
9300	28879	39154
9400	29180	39562
9500	29481	39970
9600	29782	40378
9700	30083	40787
9800	30384	41195
9900	30685	41603
10000	30986	42011

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.