



## Tool Model: XLCT 45 w/ Hex Link

### Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	7130	9667
1600	7642	10361
1700	8154	11055
1800	8666	11749
1900	9178	12444
2000	9690	13138
2100	10196	13824
2200	10702	14510
2300	11208	15196
2400	11714	15882
2500	12220	16568
2600	12726	17254
2700	13232	17940
2800	13738	18626
2900	14244	19312
3000	14750	19998
3100	15246	20670
3200	15741	21342
3300	16237	22013
3400	16732	22685
3500	17228	23357
3600	17723	24029
3700	18219	24701
3800	18714	25372
3900	19210	26044
4000	19705	26716
4100	20199	27385
4200	20692	28054
4300	21186	28723
4400	21679	29392
4500	22173	30061
4600	22666	30731
4700	23160	31400
4800	23653	32069
4900	24147	32738
5000	24640	33407
5100	25143	34089
5200	25646	34771
5300	26149	35453
5400	26652	36135
5500	27155	36817
5600	27658	37499
5700	28161	38181

PRESSURE IN: PSI	ft-lbs	NM
5800	28664	38863
5900	29167	39545
6000	29670	40227
6100	30138	40861
6200	30606	41496
6300	31074	42130
6400	31542	42765
6500	32010	43399
6600	32478	44034
6700	32946	44668
6800	33414	45303
6900	33882	45937
7000	34350	46572
7100	34850	47249
7200	35349	47926
7300	35849	48603
7400	36348	49281
7500	36848	49958
7600	37347	50635
7700	37847	51312
7800	38346	51990
7900	38846	52667
8000	39345	53344
8100	39837	54010
8200	40328	54677
8300	40820	55343
8400	41311	56009
8500	41803	56676
8600	42294	57342
8700	42786	58009
8800	43277	58675
8900	43769	59341
9000	44260	60008
9100	44752	60675
9200	45244	61342
9300	45736	62009
9400	46228	62676
9500	46720	63343
9600	47212	64010
9700	47704	64677
9800	48196	65344
9900	48688	66011
10000	49180	66678

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.