



Tool Model: XLCT 8 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	1143	1550
1600	1234	1673
1700	1326	1797
1800	1417	1921
1900	1509	2045
2000	1600	2169
2100	1677	2274
2200	1754	2378
2300	1831	2482
2400	1907	2586
2500	1984	2690
2600	2061	2794
2700	2138	2898
2800	2214	3002
2900	2291	3106
3000	2368	3211
3100	2451	3322
3200	2533	3434
3300	2616	3546
3400	2698	3658
3500	2781	3770
3600	2864	3883
3700	2947	3995
3800	3029	4107
3900	3112	4219
4000	3194	4330
4100	3276	4442
4200	3358	4553
4300	3440	4664
4400	3522	4775
4500	3604	4886
4600	3685	4996
4700	3767	5107
4800	3849	5218
4900	3931	5330
5000	4013	5441
5100	4095	5551
5200	4176	5662
5300	4258	5773
5400	4340	5884
5500	4422	5995
5600	4503	6105
5700	4585	6216

PRESSURE IN: PSI	ft-lbs	NM
5800	4667	6328
5900	4749	6438
6000	4830	6549
6100	4913	6661
6200	4996	6774
6300	5079	6885
6400	5161	6997
6500	5244	7110
6600	5327	7222
6700	5410	7334
6800	5492	7446
6900	5575	7559
7000	5658	7671
7100	5742	7784
7200	5825	7898
7300	5909	8011
7400	5992	8124
7500	6075	8236
7600	6158	8349
7700	6242	8462
7800	6325	8575
7900	6409	8689
8000	6492	8802
8100	6575	8914
8200	6658	9027
8300	6741	9139
8400	6823	9251
8500	6906	9363
8600	6989	9476
8700	7072	9588
8800	7154	9699
8900	7237	9812
9000	7320	9924
9100	7403	10037
9200	7486	10150
9300	7569	10262
9400	7652	10375
9500	7736	10488
9600	7819	10601
9700	7902	10714
9800	7985	10826
9900	8068	10939
10000	8151	11051

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.