



Tool Model: Stealth-8 w/ Hex Link

Pressure/Torque Conversion Chart

PRESSURE IN: PSI	ft-lbs	NM
1500	1199	1626
1600	1276	1730
1700	1354	1835
1800	1431	1940
1900	1508	2045
2000	1585	2149
2100	1664	2256
2200	1743	2363
2300	1822	2470
2400	1901	2577
2500	1981	2685
2600	2060	2793
2700	2139	2900
2800	2218	3007
2900	2297	3114
3000	2376	3221
3100	2458	3332
3200	2539	3442
3300	2621	3553
3400	2702	3663
3500	2784	3774
3600	2865	3884
3700	2947	3995
3800	3028	4105
3900	3110	4216
4000	3191	4326
4100	3273	4437
4200	3354	4547
4300	3436	4658
4400	3517	4768
4500	3599	4880
4600	3681	4991
4700	3763	5101
4800	3844	5212
4900	3926	5322
5000	4007	5433
5100	4090	5545
5200	4172	5656
5300	4255	5768
5400	4337	5880
5500	4420	5992
5600	4502	6104
5700	4585	6216

PRESSURE IN: PSI	ft-lbs	NM
5800	4667	6328
5900	4750	6439
6000	4832	6551
6100	4910	6657
6200	4988	6763
6300	5067	6869
6400	5145	6976
6500	5223	7081
6600	5301	7187
6700	5380	7294
6800	5458	7400
6900	5536	7506
7000	5614	7611
7100	5694	7719
7200	5773	7827
7300	5852	7934
7400	5931	8041
7500	6011	8149
7600	6090	8257
7700	6169	8364
7800	6248	8471
7900	6328	8579
8000	6407	8687
8100	6486	8794
8200	6565	8901
8300	6644	9008
8400	6723	9115
8500	6802	9222
8600	6881	9329
8700	6960	9436
8800	7039	9543
8900	7118	9651
9000	7197	9758
9100	7276	9864
9200	7354	9971
9300	7433	10078
9400	7512	10185
9500	7591	10291
9600	7669	10398
9700	7748	10505
9800	7827	10612
9900	7906	10718
10000	7984	10825

Set the pressure on the pump that corresponds to the torque value.

Always ensure that gauge calibration certificate is current.